SEARCH MODES

PARK

Great for high-trash recreational areas, including most general detecting.

General and Coins
Fine Jewellery

FIELD

Ideal for detecting in historical fields for the widest range of target sizes.

Coins and Artefacts
Fine Coins and Artefacts

BEACH

For all salty conditions — dry sand, wet sand, surf and underwater.

Wet and Dry Sand
Underwater and Surf

QUICK START

1 TURN ON

2 SELECT SEARCH MODE

3 NOISE CANCEL

4 GO DETECTING

MINELAB

X-TERRA PRO

GETTING STARTED GUIDE

This Getting Started Guide and the full length X-TERRA PRO® User Manual are available to download online.

Get these languages and more:

DE Deutsch
FR français
KR 한국어
RU русский
ES Español
JP 日本語
PT Português
ZH 中文

minelab.com

4901-0418-1

MINELAB

ASSEMBLY

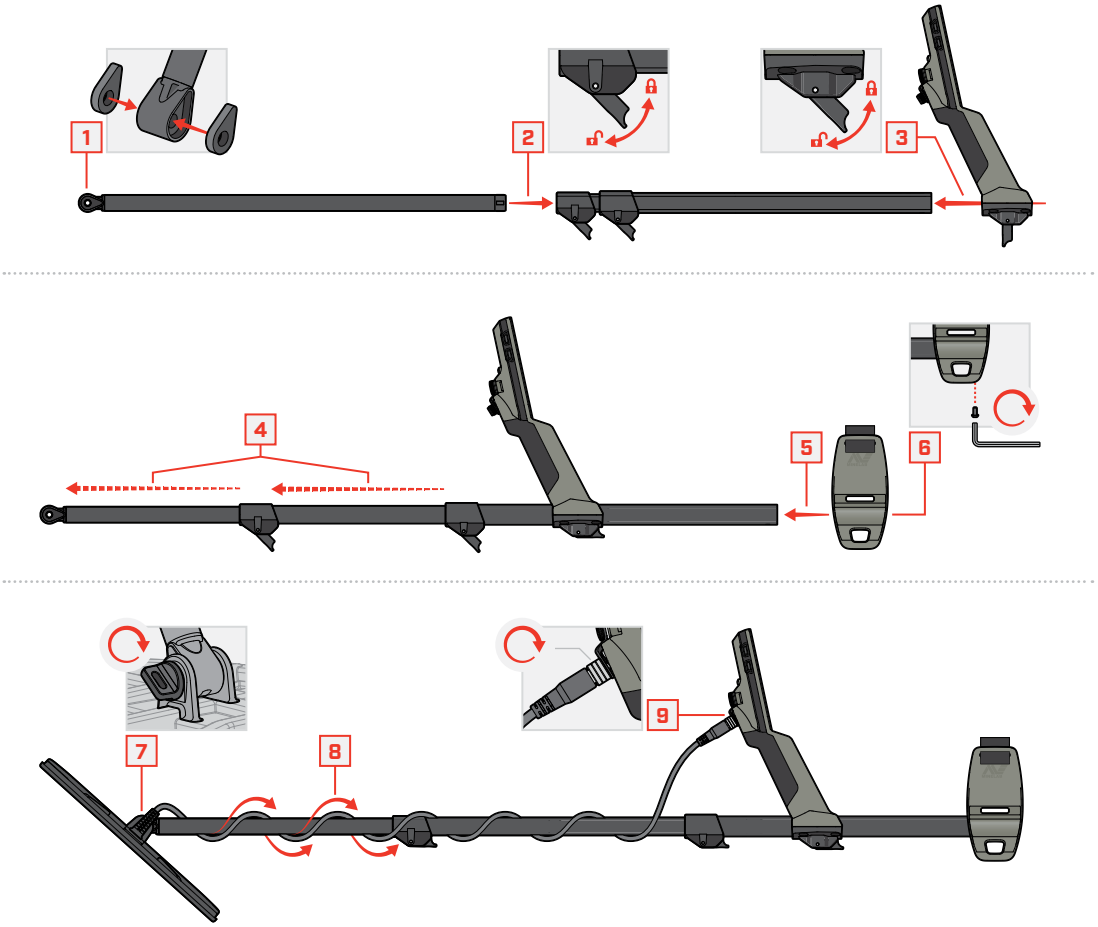

CHARGING

5–6 HOURS

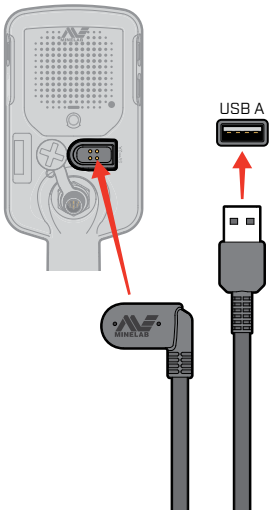

Charge your detector with a good-quality USB charger that has a minimum charging capacity of 2 A @ 5 V.

Risk of USB charger failure if a low quality charger is used.

Look for the following marks on USB chargers:

CONTROLS & DISPLAY

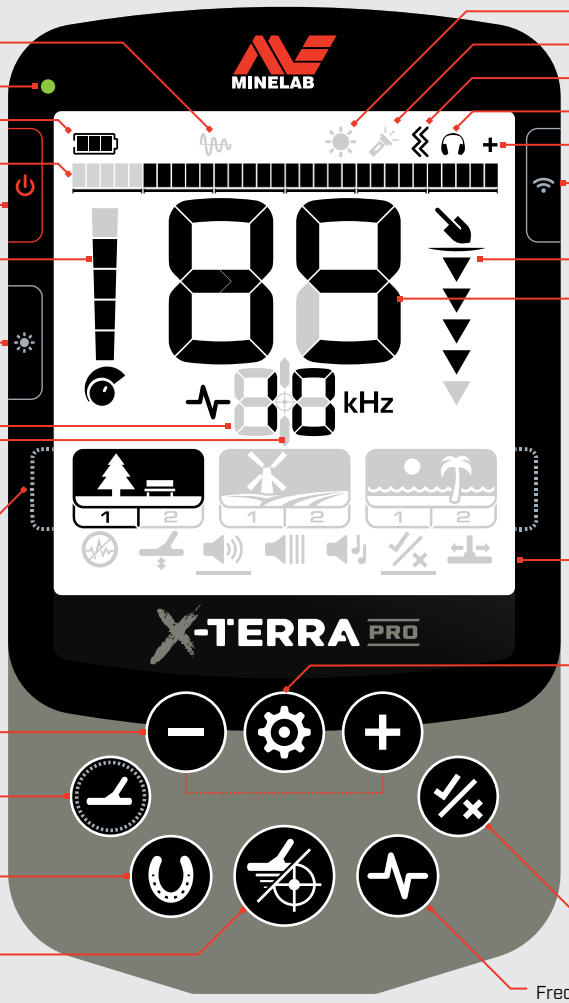

- Tracking Ground Balance Indicator
- Charge Status LED
- Battery Level / Charging
- Discrimination Scale
- Power
- Sensitivity Level
- Short press: Backlight
  Long press: Flashlight
- Frequency Display
- Pinpoint Indicator
- Search Modes
- Sensitivity and Settings Adjust (Minus/Plus)
- Search Mode
- All Metal
- Pinpoint/Detect
- Backlight Indicator
- Flashlight Indicator
- Vibration Indicator
- Headphones Indicator
- Wireless Audio Indicator
- Short Press: Wireless Audio On/Off
  Long Press: Wireless Audio Pairing
- Depth Gauge
- Target Identification Number

Settings
Short press: Scroll to next Setting

- Noise Cancel
- Ground Balance
- Volume Adjust
- Threshold Level
- Target Tone
- Accept/Reject
- Recovery Speed

Advanced Settings
Long press: Toggle Advanced Setting

- Tone Volume
- Tone Break

- Accept/Reject
- Frequency